


## DP- 600 Music On Hold Player

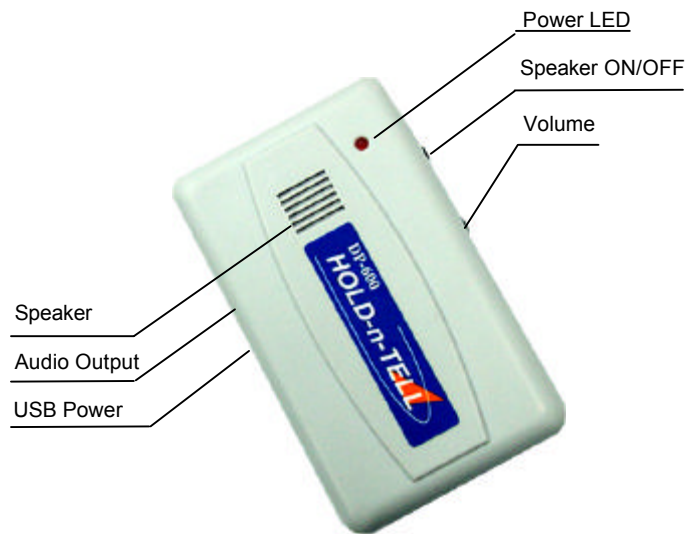

### 1. Package Contents

- 1 x DP-600 Unit
- 1 x USB Power Adapter
- 1 x USB Cable
- 2 x Audio Patch Cords (1 x 1/8" phone plug, 1 x RCA plug)
- 1 x User's Manual
- 1 x Mounting Plate

### 2. Installation

1. Connect the DP-600 to the PC with the USB cable. The device will be recognized by Windows as a removable drive. Delete the old file (if any) from the drive and copy the new file over. There should be only one file on the drive.
2. Connect the DP-600's audio output to the phone system's

music on hold port. Two different audio patch cords are provided to accommodate most phone systems.

3. Plug the power adapter into a wall outlet and connect the DP-600 to it with the USB cable. The power LED should turn on and the audio should automatically start to play in about 10 seconds.
4. Adjust the volume to the proper level.
5. The internal speaker is provided for monitoring purposes. It may be turned on or off during operation. Turning the speaker on or off has no effect on the audio output.
6. A mounting plate is provided for wall mounting.
7. In case of power outage, the DP-600 will automatically start to play after the power is restored.

### 3. Specifications

1. Number of Sound Files: 1
2. File Type: MP3, WMA
3. Internal Memory: 128MB flash memory
4. PC Interface: USB
5. Audio Output Power: 200mW max.
6. Volume Control: Yes
7. Monitoring Speaker: Yes
8. Mounting Plate: Yes

### 4. Trouble shooting

1. The power LED is on but there is no sound.
  - \* Make sure the sound file is a supported type.
  - \* Make sure the output volume is turned up.
  - \* Make sure the audio patch cord is securely connected.
2. The sound quality is poor.
  - \* Make sure the original sound quality is good.
  - \* Make sure the audio patch cord is securely connected.
  - \* Try turning the volume down a little bit.