

DP- 700 User's Manual



Package Contents

- 1 x DP-700 Player
- 1 x Power Adapter (5V DC regulated output)

CAUTION: Using other power adaptor may damage the player.

- 1 x Audio Patch Cord
- 1 x User's Manual
- 1 x Mounting Plate

Installation

1. Copy desired sound files to the USB drive. Add a unique three-digit number to each filename. Numbers must be consecutive, starting from 001 and up to 099. Insert the USB drive into the player.
2. Connect one of the player's two output ports to the phone system's MOH/BGM port. Two output ports of different kind of jacks are provided in order to accommodate different kind of MOH/BGM ports.
3. Use the provided power adaptor to power the unit. Caution: using other power adaptor will void the warranty and may damage the unit.
4. The LED display will show the file number currently being played. Press the Select button to go to the next file. If you select past the last file the display will show 'AL', which means all files (instead of a single file) will be repeated. Pressing the Select button again will go back to the first file.
5. Call from a second line and put it on hold. Listen to the audio and adjust the volume to the proper level. Note that the volume adjustment affects both the output and the internal speaker.
6. The internal speaker can be turned on/off by pressing the Speaker button. It is provided for audio content verification and trouble-shooting purposes. It is recommended to be turned off during normal operation in order to save power consumption.
7. The USB drive may be inserted/removed without turning the power off.
8. In case of power outages, the player will automatically re-start the same file with the same output volume after power is restored.

Specifications

Max. Number of Files: 99 (repeat single or repeat all)
File Type Supported: MP3, CBR/VBR 320kbps or lower
USB Drive Capacity: 32 GB max. (500 hours of 128 kbps MP3 audio)
USB File System: FAT (FAT16) or FAT32
MOH Impedance Compatibility: 8 Ohm and 600 Ohm

Trouble shooting

The power LED is on but there is no sound.

1. Make sure the file type is supported.
2. Make sure the output volume is turned up.
3. Make sure the audio patch cord is securely connected.
4. Make sure the file numbers are assigned.

The sound quality is poor.

1. Make sure the audio patch cord is securely connected.
2. Try turning the volume down a little bit.

The LED display shows two dashes (--).

1. Make sure there is a sound file assigned with file number 001.

The LED display shows/flashes '88'.

1. The USB drive is corrupted or broken. Try reformatting the drive.

Three Year Limited Warranty

Eletech ("we" or "us") warrants this PRODUCT against defects in materials and workmanship to the original purchaser, under normal use and conditions, for a period of THREE (3) YEARS from the date of original purchase. If you discover a defect, we will at our option, either repair the PRODUCT with new or refurbished replacement parts, or replace the PRODUCT if we are unable to restore it to good working order after a reasonable number of attempts at no charge, subject to verification of the defect or malfunction and proof of the date of purchase. This limited warranty does not apply to damage caused by (1) a direct lightning strike, (2) misuse, neglect, casualty, or improper installation, (3) repairs done or attempted by someone not authorized by us, (4) improper use, maintenance or modification of this PRODUCT, or (5) any other cause outside of our control. This Limited Warranty does not apply to anyone other than the original purchaser of the PRODUCT.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.